

Transfer function from Servo Input (error-point) to output of Pomona box to laser PZT

