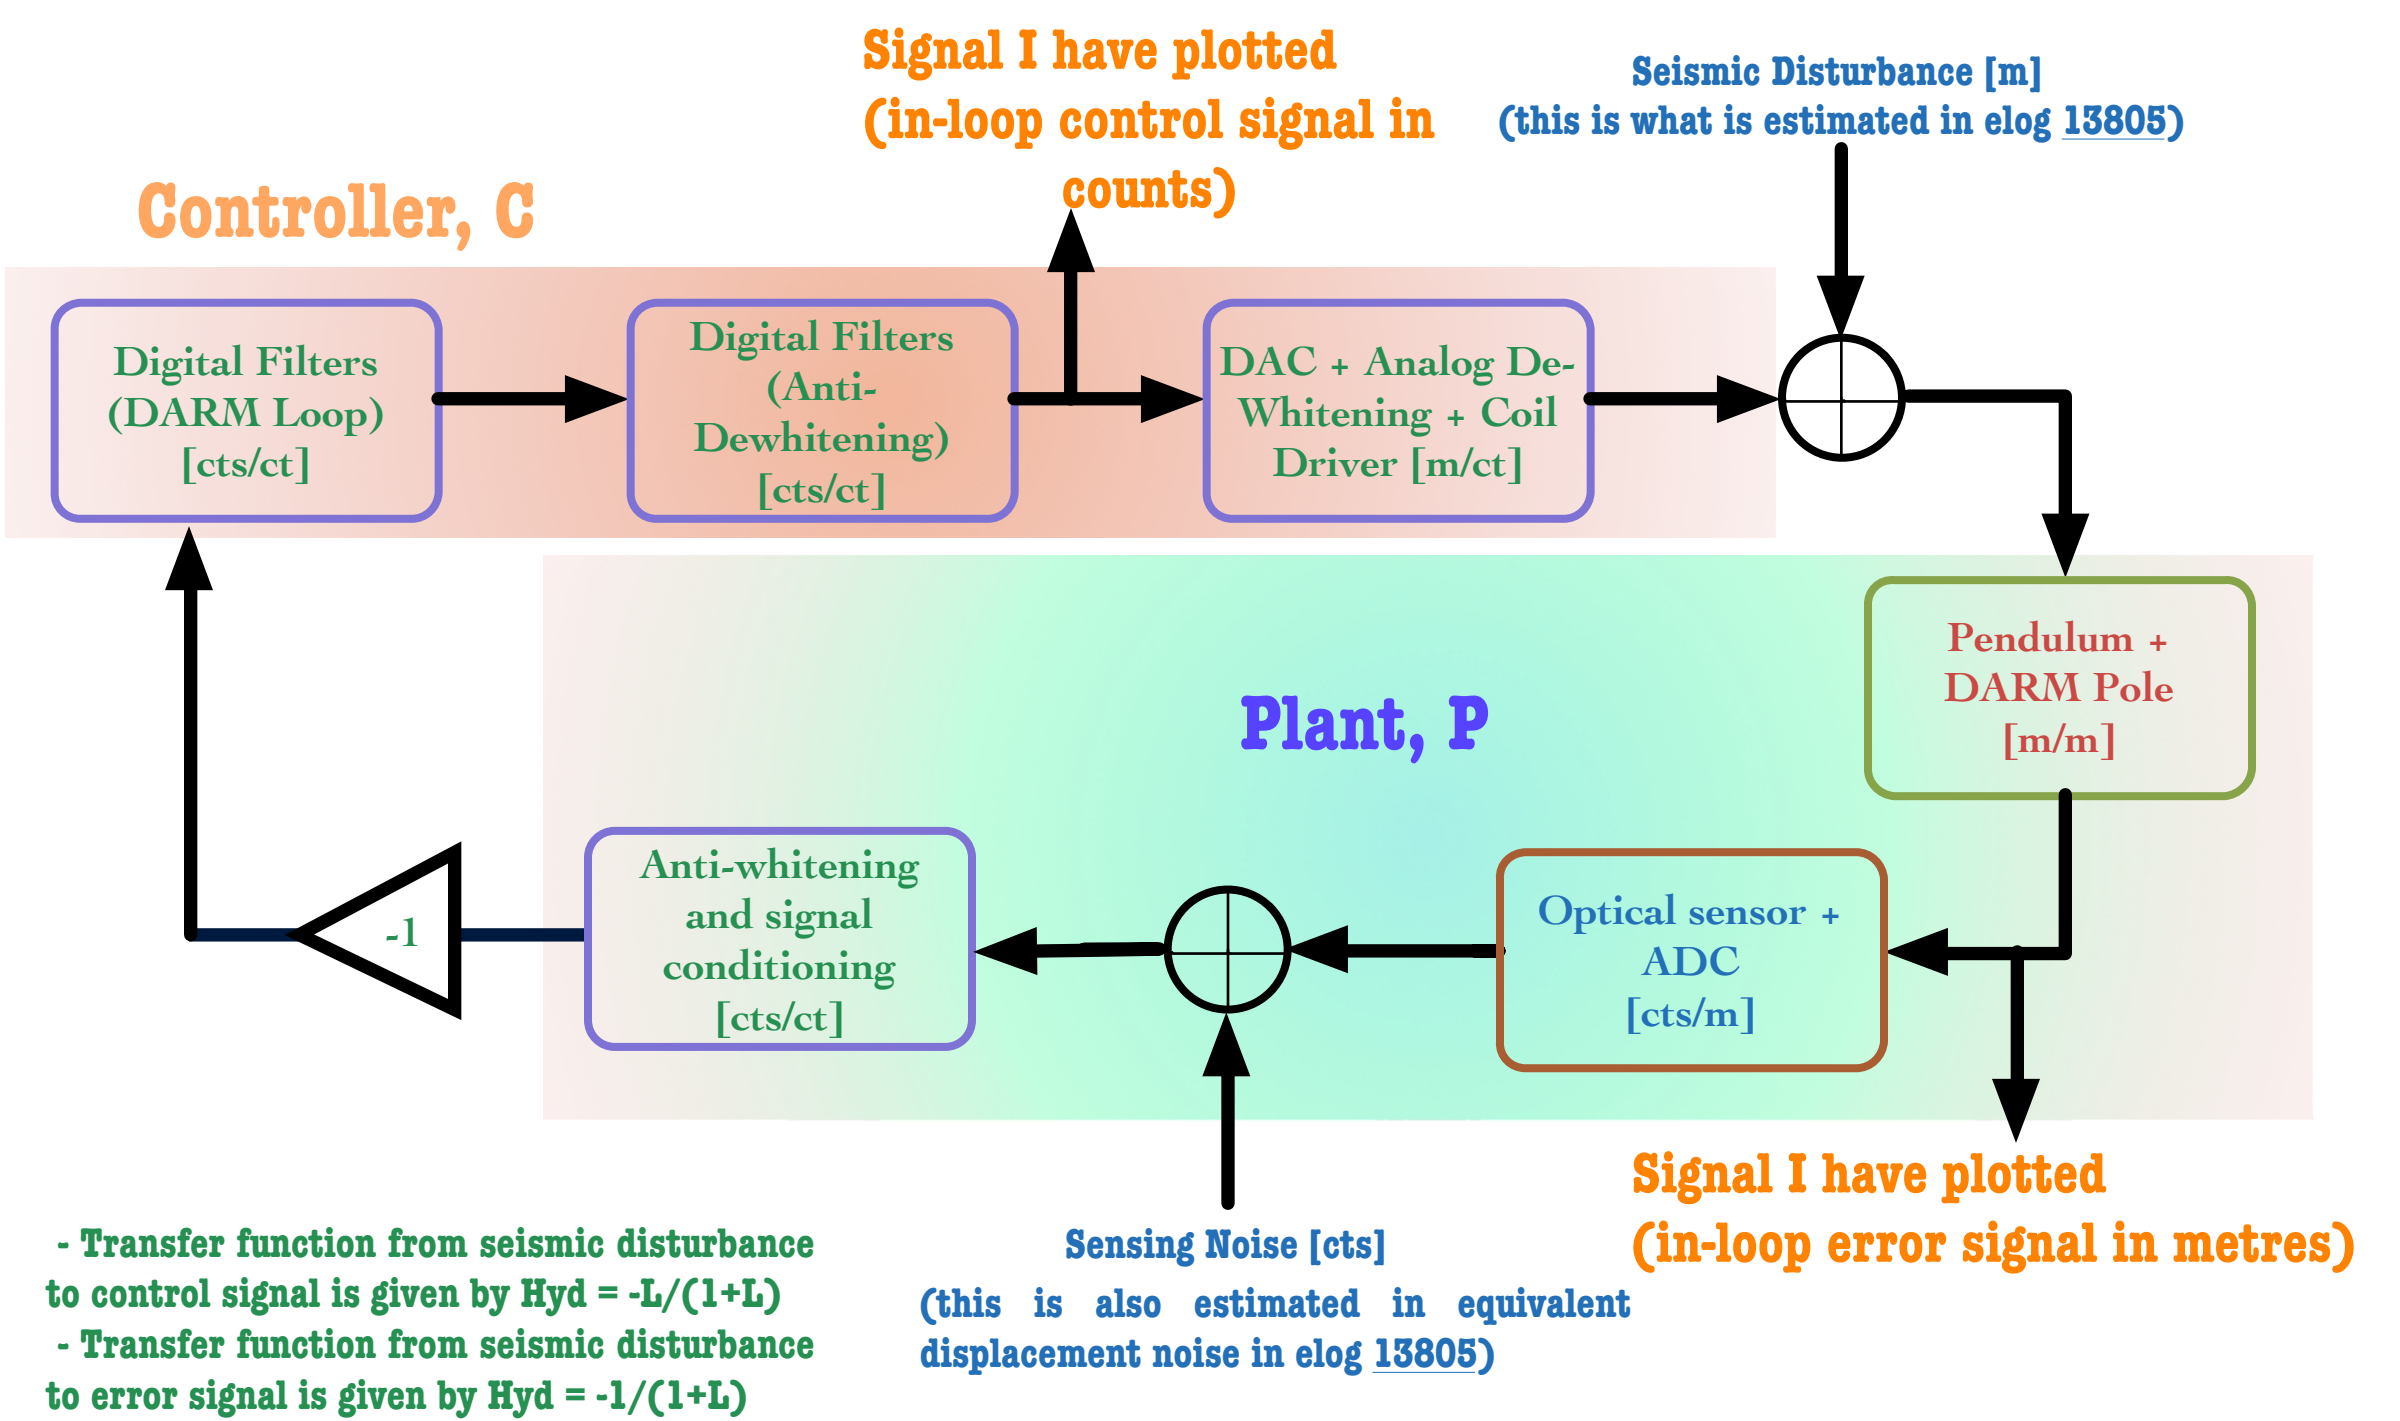

- Transfer function from seismic disturbance to control signal is given by Hyd = -L/(1+L)
- Transfer function from seismic disturbance to error signal is given by Hyd = -1/(1+L)