

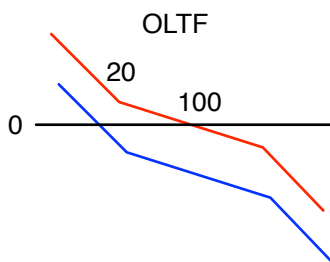




STEP1 Error Blending

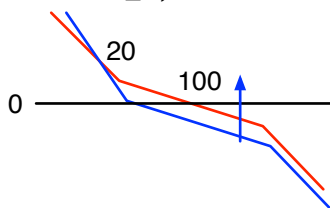



STEP2: Turn on 20:0 integrator for CARM_B, increase the B gain

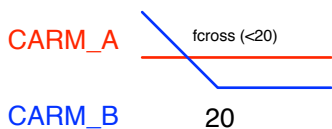



STEP3: Increase the B gain further, take over the control

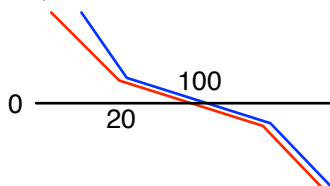

STEP4: Engage 20:1 for the A error, cancelling the integrator

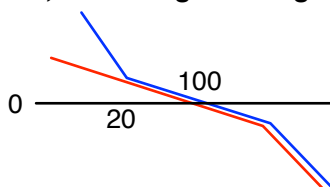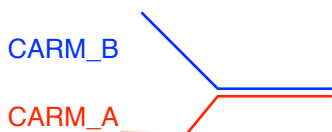

STEP5: Lower A gain further, turn CARM_A off

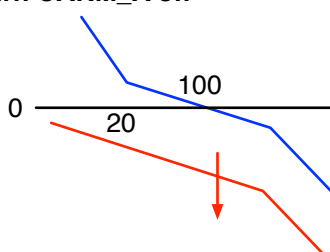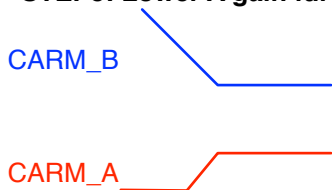

STEP6: Turn ON AO path, increase the gain

